

## Cool 'n' Quiet!™ Technology

The motherboard supports the AMD Cool 'n' Quiet!™ Technology that dynamically and automatically change the CPU speed, voltage, and amount of power depending on the task the CPU performs.


### Enabling Cool 'n' Quiet!™ Technology

To enable Cool 'n' Quiet!™ Technology:

1. Turn on the system and enter BIOS by pressing the <Del> key during the Power On Self-Tests (POST).
2. Go to **Advanced > CPU Configuration > AMD Cool 'n'Quiet function** and set it to [Enabled].
3. Save your changes and exit BIOS Setup.
4. Reboot your computer and set your Power Option Properties depending on your operating system.


#### *Windows® XP*

1. From the Windows® XP operating system, click **Start**. Click **Settings > Control Panel**.
2. Make sure to switch Control Panel to **Classic View**.
3. Double-click the **Display** icon in Control Panel, and then select the **Screen Saver** tab.
4. Click **Power**. The following dialogue box appears.
5. From the Power schemes combo list box, select **Minimal Power Management**.
6. Click **OK** to effect settings.

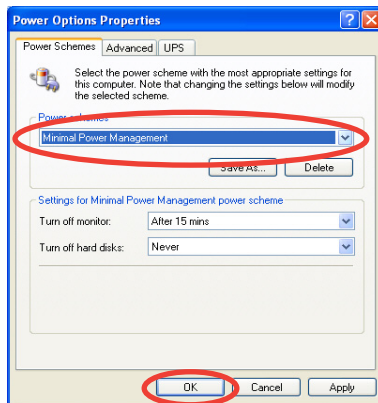

## Windows® Vista™

1. From the Windows® Vista™ operating system, click **Start**. Click **Control Panel**.
2. Make sure to switch Control Panel to **Classic View**.
3. Double-click the **Personalization** icon in Control Panel, and then click **Screen Saver**.
4. Click “**Change power settings...**”. The following dialogue box appears.
5. From the Preferred plans, select **Balanced**.
6. Close all windows.

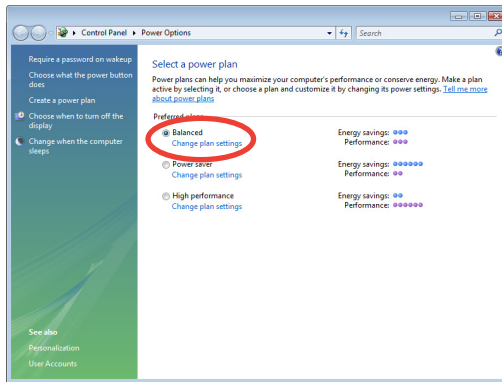

- 
- For Windows® XP OS, make sure to install the AMD Cool 'n' Quiet!™ driver and application before using this feature.
  - The AMD Cool 'n' Quiet!™ technology feature works only with the AMD heatsink and fan assembly with monitor chip
  - If you purchased a separate heatsink and fan package, use the ASUS Q-Fan technology feature to automatically adjust the CPU fan speed according to your system loading.
-

## Launching the Cool 'n' Quiet!™ software

The motherboard support CD/DVD includes the Cool 'n' Quiet!™ software that enables you to view your system's real-time CPU Frequency and voltage.



---

Make sure to install the Cool 'n' Quiet!™ software from the motherboard support CD/DVD.

---

To launch the Cool 'n' Quiet!™ program:

1. If you are using Windows® XP, click the **Start** button. Select **Programs > ASUS > Cool & Quiet > Cool & Quiet**.
2. If you are using Windows® Vista, click the **Start** button. Select **All Programs > ASUS > Cool & Quiet > Cool & Quiet**.
3. The Cool 'n' Quiet!™ technology screen appears and displays the current CPU Frequency and CPU Voltage.

